




6.4L Powerstroke Cold Air Intercooler Charge Pipe Installation Sheet



1. Mark the area that will be cut in order to fit the charge pipe. (Use image as reference.)

2. After making the cut sand/smoothen the cut area. (Optional)

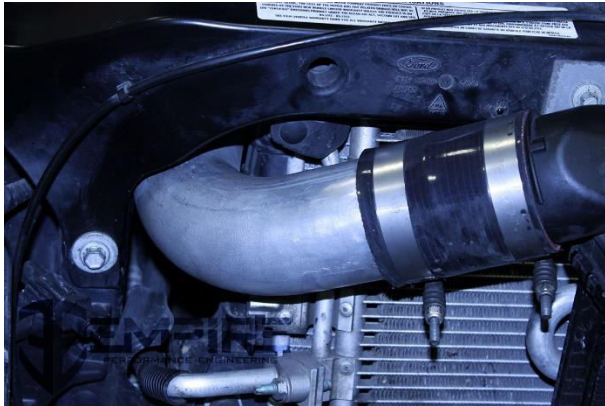

3. Insert pipe in newly cut opening.

4. Use provided boots & clamps to firmly attach to intercooler.